
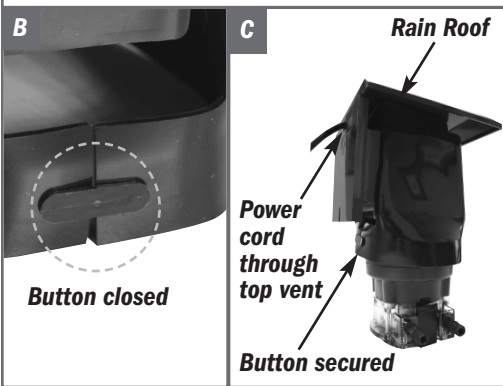


PUMP COVER INSTALLATION INSTRUCTION

Classic Series Single Head

- ⚠ WARNING** TO BE INSTALLED AND MAINTAINED BY PROPERLY TRAINED PROFESSIONAL INSTALLER ONLY. READ MANUAL & LABELS FOR ALL SAFETY INFORMATION & INSTRUCTIONS.
- ⚠ WARNING** Must be installed with the Stenner Rain Roof; part number MP90000.
- ⚠ CAUTION** To be used only with pumps that run intermittently. 25% duty cycle max (10 min. ON, 30 min. OFF). Maximum ambient operating temperature is 104° F (40° C). Continuous operation, especially in direct sunlight, will cause the pump to shut down due to thermal overload protection.

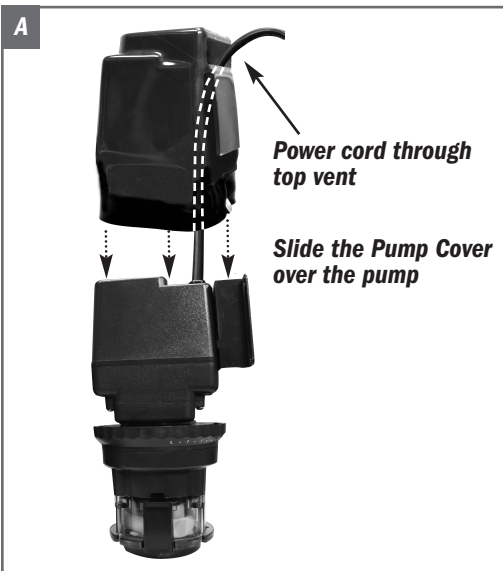

- 1 Turn off pump and unplug it.
- 2 Remove the rain roof (if already installed).
- 3 Insert the power cord through the bottom of the cover and out through the top vent and slide the pump cover over the pump as shown. Ensure that vent intake and exhaust are unobstructed. **Figure A**
- 4 Button cover to secure it. **Figure B**
- 5 Install rain roof. **Figure C**
- 6 Plug pump in and turn it on.